

**SD card real time Data Recorder**  
**10 Light Source select , Auto range 0 to 50,000 LUX**

# LED LIGHT METER

**Model : LX-1148SD**



Your purchase of this LED LIGHT METER with SD CARD DATA LOGGER marks a step forward for you into the field of precision measurement. Although this meter a complex and delicate instrument, its durable structure will allow many years of use if proper operating techniques are developed. Please read the following instructions carefully and always keep this manual within easy reach.



**OPERATION MANUAL**

# TABLE OF CONTENTS

1. FEATURES.....	1
2. SPECIFICATIONS.....	2
3. FRONT PANEL DESCRIPTION.....	6
4. MEASURING PROCEDURE.....	7
4-1 Function selection/Measurement.....	7
4-2 Light Meter Measurement.....	7
4-3 Light Source Selection.....	8
4-4 Type K/J thermometer Measurement.....	9
4-5 Data Hold.....	10
4-6 Data Record ( Max./ Min. reading ).....	10
4-7 LCD Backlight ON/OFF.....	11
5. DATALOGGER.....	11
5-1 Preparation before execute datalogger function.....	11
5-2 Auto Datalogger ( Set sampling time $\geq 1$ second ).....	12
5-3 Manual Datalogger ( Set sampling time = 0 second ).....	13
5-4 Check time information.....	13
5-5 SD Card Data structure.....	14
6. Saving data from the SD card to the computer.....	15
7. ADVANCED SETTING.....	16
7-1 Set clock time ( Year/Month/Date, Hour/Minute/ Second ).....	17
7-2 Set sampling time .....	18
7-3 Auto power OFF management .....	18
7-4 Set beep Sound ON/OFF.....	18
7-5 Decimal point of SD card setting.....	19
7-6 SD memory card format.....	19
7-7 Select the temperature unit to °C or °F .....	20
7-8 Select the thermometer type to Type K or Type J.....	20
8. POWER SUPPLY from DC ADAPTER.....	21
9. BATTERY REPLACEMENT.....	21
10. SYSTEM RESET.....	22
11. RS232 PC serial interface.....	22
12. Optional Type K Temp. probe.....	24
13. PATENT.....	24

# 1. FEATURES

- \* 3 ranges, 2,000/20,000/100,000 LUX.
- \* LUX & Foot Candle unit selection with default.
- \* Auto range for light measurement.
- \* Spectrum of photo sensor meets C.I.E..
- \* Light measurement with zero adjustment by push button.
- \* Separate probe, easy for operation of different measurement environment.
- \* Measure White, Red, Yellow, Green, Blue, and Purple LED and Standard Lighting in Lux or Foot-Candle units.
- \* Type K, Type J thermocouple thermometer.
- \* Real time SD memory card Datalogger, it Built-in Clock and Calendar, real time data recorder , sampling time set from 1 second to 3600 seconds.
- \* Manual datalogger is available ( set the sampling time to 0 ), during execute the manual datalogger function, it can set the different position ( location ) No. ( position 1 to position 99 ).
- \* Innovation and easy operation, computer is not need to setup extra software, after execute datalogger, just take away the SD card from the meter and plug in the SD card into the computer, it can down load the all the measured value with the time information ( year/month/date/ hour/minute/second ) to the Excel directly, then user can make the further data or graphic analysis by themselves.
- \* SD card capacity : 1 GB to 16 GB.
- \* LCD with green light backlight, easy reading.
- \* Can default auto power off or manual power off.
- \* Data hold, record max. and min. reading.
- \* Microcomputer circuit, high accuracy.
- \* Power by UM3/AA ( 1.5 V ) x 6 batteries or DC 9V adapter.
- \* RS232/USB PC COMPUTER interface.

## 2. SPECIFICATIONS

### 2-1 General Specifications

Circuit	Custom one-chip of microprocessor LSI circuit.	
Display	LCD size : 52 mm x 38 mm LCD with green backlight ( ON/OFF ).	
Measurement/ Unit	Light : LUX, Feet candle ( Ft-cd ) Type K/J thermometer : °C or °F.	
Light Sensor Structure	The exclusive photo diode & color correction filter, spectrum designed to meet C. I. E.	
Light Source select	L 0~ L9 Light Source selection.	
Zero Adj. * <i>Light</i>	By push button.	
Datalogger Sampling Time Setting range	Auto	1 second to 3600 seconds @ <i>Sampling time can set to 1 second, but memory data may loss.</i>
	Manual	Push the data logger button once will save data one time. @ <i>Set the sampling time to 0 second.</i> @ <i>Manual mode, can also select the 1 to 99 position ( Location ) no.</i>
Memory Card	SD memory card. 1 G to 16 G.	
Advanced setting	<ul style="list-style-type: none"> <li>* Set clock time ( Year/Month/Date, Hour/Minute/ Second )</li> <li>* Decimal point of SD card setting</li> <li>* Auto power OFF management</li> <li>* Set beep Sound ON/OFF</li> <li>* Set thermometer type to Type K or Type J</li> <li>* Set temperature unit to °C or °F</li> <li>* Set sampling time</li> <li>* SD memory card Format</li> </ul>	
Temperature Compensation	Automatic temp. compensation for the type K/J thermometer.	

Data Hold	Freeze the display reading.
Memory Recall	Maximum & Minimum value.
Sampling Time of Display	Approx. 1 second.
Data Output	RS 232/USB PC computer interface. * Connect the optional RS232 cable UPCB-02 will get the RS232 plug. * Connect the optional USB cable USB-01 will get the USB plug.
Operating Temperature	0 to 50 °C.
Operating Humidity	Less than 85% R.H.
Power Supply	* Alkaline or heavy duty DC 1.5 V battery ( UM3, AA ) x 6 PCs, or equivalent.
	* DC 9V adapter input. ( AC/DC power adapter is optional ).
Power Current	Normal operation ( w/o SD card save data and LCD Backlight is OFF ) : <i>Approx. DC 6.5 mA.</i>
	When SD card save the data but and LCD Backlight is OFF ) : <i>Approx. DC 30 mA.</i>
	* AC/DC power adapter is optional. <i>consumption will increase approx. 16 mA.</i>
Weight	346 g/0.76 LB.
Dimension	182 x 73 x 47.5 mm (7.1 x 2.9 x 1.9 inch)
Standard Accessories Included	* Instruction manual..... 1 PC
	* Light sensor with protective cover..... 1 PC

Optional Accessories	SD Card ( 1 GB ) SD Card ( 2 GB ) Type K thermocouple probe. AC to DC 9V adapter. USB cable, USB-01. RS232 cable, UPCB-02. Data Acquisition software,SW-U801-WIN. Hard carrying case, CA-06.
----------------------	---

**2-2 Electrical Specifications (23±5 °C)**

**Light meter**

Measurement	Range	Max. In-range Display
LUX @ auto range	2,000 LUX	0 - 1,999 LUX
	20,000 LUX	1,800 - 19,990 LUX
	100,000 LUX	18,000 - 99,900 LUX
Feet-candle @ auto range	200 Ft-cd	0 - 186.0 Ft-cd
	2,000 Ft-cd	167.0 - 1,860.0 Ft-cd
	10,000 Ft-cd	1,670.0 - 9,290.7 Ft-cd

Range	Resolution	Accuracy
2,000 LUX	1 LUX	±(4 % +2 dgt)
20,000 LUX	10 LUX	
100,000 LUX	100 LUX	
200 Ft-cd	0.1 Ft-cd	±(4 % +2 Ft-cd)
2,000 Ft-cd	1 Ft-cd	
10,000 Ft-cd	10 Ft-cd	

*Note : Accuracy tested by a standard parallel light tungsten lamp of 2856 K degree temperature.*

**Type K/J thermometer**

Sensor Type	Resolution	Range	Accuracy
Type K	0.1 °C	-50.0 to 1300.0 °C -50.1 to -100.0 °C	± ( 0.4 % + 0.5 °C ) ± ( 0.4 % + 1 °C )
	0.1 °F	-58.0 to 2372.0 °F -58.1 to -148.0 °F	± ( 0.4 % + 1 °F ) ± ( 0.4 % + 1.8 °F )
Type J	0.1 °C	-50.0 to 1200.0 °C -50.1 to -100.0 °C	± ( 0.4 % + 0.5 °C ) ± ( 0.4 % + 1 °C )
	0.1 °F	-58.0 to 2192.0 °F -58.1 to -148.0 °F	± ( 0.4 % + 1 °F ) ± ( 0.4 % + 1.8 °F )

*@ Above specification tests under the environment RF Field Strength less than 3 V/M & frequency less than 30 MHz only.*

# 3. FRONT PANEL DESCRIPTION

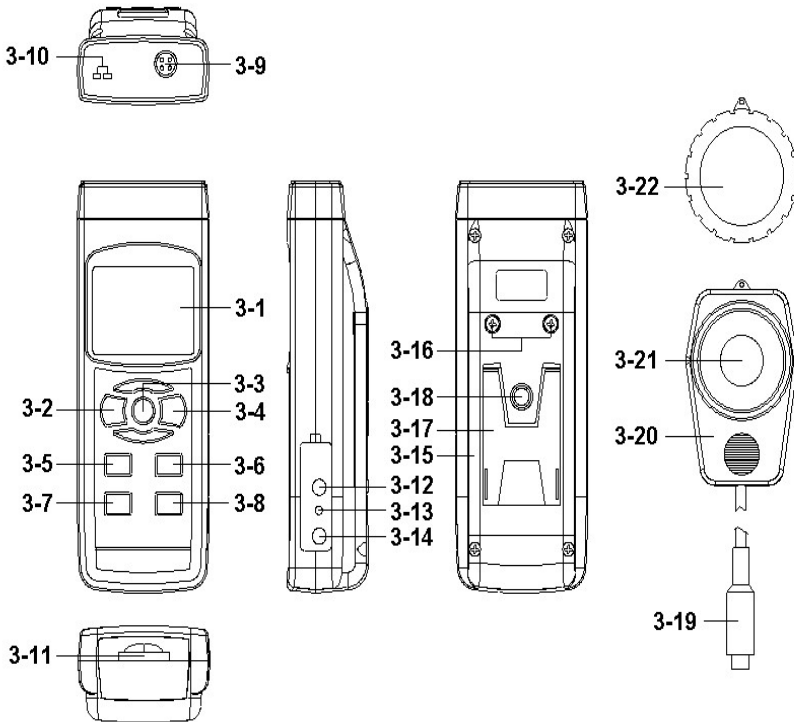


Fig. 1

- |                                       |                                       |
|---------------------------------------|---------------------------------------|
| 3-1 Display                           | 3-13 Reset Button                     |
| 3-2 Power Button ( Backlight Button ) | 3-14 DC 9V Power Adapter Input Socket |
| 3-3 Hold Button                       | 3-15 Battery Compartment/Cover        |
| 3-4 REC Button                        | 3-16 Battery Cover Screws             |
| 3-5 UNIT Button ( ▲ Button )          | 3-17 Stand                            |
| 3-6 FUNCTION Button ( ▼ Button )      | 3-18 Tripod Fix Nut                   |
| 3-7 SET Button ( Clock Button )       | 3-19 Probe Plug                       |
| 3-8 LOG Button ( ENTER Button )       | 3-20 Sensor Handle                    |
| 3-9 Probe input socket                | 3-21 Light Sensor                     |
| 3-10 Type K/J thermometer socket      | 3-22 Cover of Light Sensor            |
| 3-11 SD card socket                   |                                       |
| 3-12 RS-232 Output Terminal           |                                       |



## 4. MEASURING PROCEDURE

### 4-1 Function selection/Measurement

1) Power on the meter by pressing the " Power button " ( 3-2, Fig. 1 ) > 3 seconds continuously.

\* *After already power on the meter, pressing the " Power button " > 3 seconds continuously will turn off the meter.*

2) The meter can select 2 kind function as :

- a. **Light meter**
- b. **Type K/J Thermometer**

Pressing the " Function Button " ( 3-6, Fig. 1 ) > 3 seconds ( not release the button ), the Display will show the following text in sequence :

<b>LigHt</b>	<b>Light meter</b>
<b>tP</b>	<b>Type K/J Thermometer</b>

Until the Display show the desired mode ( Function ), just release the " Function Button " ( 3-6, Fig. 1 ), the meter will execute this function with default.

### 4- 2 Light Meter Measurement

- a. Install the " Probe Plug " ( 3-19, Fig. 1 ) into the " Probe Input Socket " ( 3-9, Fig. 1 ).
- b. Power on the meter by pressing the " Power Button " ( 3-2, Fig. 1 ). The display will show the " LUX " ( Ft-cd ) unit Now the meter is ready for make the measurement.
- c. Use the fingers to hold the " Sensor Handle " ( 3-20 ), face the " Light Sensor " ( 3-21, Fig. 1 ) against to the measurement light source directly. The display will show the light measurement value.

Remark :

- \* *If intend to change the Light unit ( LUX, Ft-cd ), press the Unit Button " ( 3-5, Fig. 1 ) > 3 seconds, the unit will change from LUX, Ft-cd in sequence, until the desired unit is present on the Display release the Unit Button ", the select unit will save into the memory with default.*
- \* ***During the normal Light measurement, if blank the Light Sensor ( 3-21, Fig. 1 ) by " Sensor Cover " ( 3-22, Fig. 1 ), the display not show zero value, press the " ▲ Button " ( 3-5, Fig. 1 ) and " ▼ Button " ( 3-6, Fig. 1 ) together > 3 seconds, Display will show zero value. Upon completion, remove the sensor cover.***

### **4-3 Light Source Selection**

There are 10 light source can selections (L0 – L9) each having a unique calibration correction factor (multiplier).Reference the Light Source Factors list below. The multipliers for locations L0 to L6 are fixed for the lighting types listed. Locations L7 to L9 are extra locations that the user can customize (with a multiplier from 0.001 to 1.999). How to change the light source (L.S.) selection:

1. Press and hold the " REC " button >2 sec., into the light source code (L0 - L9) select function , then use the " ▲ " or " ▼ " to selection , The location's multiplier (correction factor) will be shown on the big digital of the LCD (L8...1.000, for example), light source code will be shown on the small digital of the LCD (L0~L9, for example). After selection is complete please press " ENTER " button back to measurement , light source code and Coefficient will show on the small digital of the LCD , loop display.
2. To customize a location, select L7, L8 or L9 and, once selected, Please press and holding the " SET " button >2 sec. to enter the multiplier programming mode. Then release the " SET " button,Now use the " ▲ " or " ▼ " Key to change the multiplier. After change is complete Press "enter " Button once, complete the setting, and Press " power " Button once , back measurement.

## Light Source Factors

L0: Standard light source: 1.00.

L1: LED white daylight: 0.99.

L2: LED RED light: 0.516.

L3: LED AMBER (YELLOW) light: 0.815.

L4: LED GREEN light: 1.216.

L5: LED BLUE light: 1.475.

L6: LED PURPLE light: 1.148.

L7~L9: Programmable User Custom Locations (preset to 1.00)

### **4-4 Type K/J thermometer Measurement**

- a. Function select to " Type K/J thermometer "
- b. Not install the LUX " Probe Plug " ( 3-19, Fig. 1 ) into the " Probe Input Socket " ( 3-9, Fig. 1 )
- c. Plug the Thermocouple Temp. Probe ( Type K Temp. probe or Type J Temp. probe, optional ) into " Type K/J Probe Input Socket " ( 3-10, Fig. 1 )  
The Display will show the measuring value that sensing from the Temp. probe.
- d. If the Display show the indicator " K ", it is ready for Type K thermometer.  
If the Display show the indicator " J ", it is ready for Type J thermometer.

#### *Remark :*

- \* *The meter is defaulted to " Type K thermometer ".  
If intend to select the " Type J thermometer with default , please refer chapter 7-8 ( page 20 ).*
- \* *If intend to select the Temp. unit to  $^{\circ}\text{F}$  (  $^{\circ}\text{C}$  )  
with default , please refer chapter 7-7 ( page 20 ).*

#### **4-5 Data Hold**

During the measurement, press the " Hold Button " ( 3-3, Fig. 1 ) once will hold the measured value & the LCD will display a " HOLD " symbol.

Press the " Hold Button " once again will release the data hold function.

#### **4-6 Data Record ( Max., Min. reading )**

- 1) The data record function records the maximum and minimum readings. Press the " MAX/MIN Button " ( 3-4, Fig. 1 ) once to start the Data Record function and there will be a " REC " symbol on the display.
- 2) With the " REC " symbol on the display :
  - a) Press the " MAX/MIN Button " ( 3-4, Fig. 1 ) once, the " REC MAX " symbol along with the maximum value will appear on the display.
  - b) Press the " MAX/MIN Button " ( 3-4, Fig. 1 ) again, the " REC MIN " symbol along with the minimum value will appear on the display.
  - c) Press the " MAX/MIN Button " ( 3-4, Fig. 1 ) again, the the " MIN " symbol will be appeared, LCD only show the " REC " symbol, the meter start the Data Record function again.
- 3) To exit the memory record function, just press the " MAX/MIN Button " ( 3-4, Fig. 1 ) > 3 seconds continuously. The display will revert to the current reading.

#### **4-7 LCD Backlight ON/OFF**

- 1) After power ON, the " LCD Backlight " will light automatically. During the measurement, Push the " Backlight Button " ( 3-2, Fig. 1 ) once , will turn OFF the " LCD Backlight " .
- 2) Push the " Backlight Button " once will turn ON the " LCD Backlight " again.

## 5. DATALOGGER

### *5-1 Preparation before execute datalogger function*

a. Insert the SD card

Prepare a " SD memory card " ( 1 G to 16 G, optional ), insert the SD card into the " SD card socket " ( 3-11, Fig. 1). The front panel of the SD card should face against the the down case.

b. SD card Format

If SD card just the first time use into the meter, it recommend to make the " SD card Format " at first. , please refer chapter 7-6 ( page 19 ).

c. Time setting

If the meter is used at first time, it should to adjust the clock time exactly, please refer chapter 7-1 ( page 17 ).

d. Decimal format setting



The numerical data structure of SD card is default used the " ." as the decimal, for example "20.6" "1000.53" . But in certain countries ( Europe ...) is used the " ," as the decimal point, for example " 20, 6 " "1000,53". Under such situation, it should change the Decimal character at first, details of setting the Decimal point, refer to Chapter 7-5, page 19.

## 5-2 Auto Datalogger ( Set sampling time $\geq 1$ second )

### a. Start the datalogger

Press the " LOG Button ( 3-8, Fig. 1 ) > 3 seconds continuously, the lower LCD will show the text of " Log " then " REC " symbol will flashing per sampling time, at the same time the measuring data along the time information will be saved into the memory circuit.

#### *Remark :*

- \* *How to set the sampling time, refer to Chapter 7-2, page 18.*
- \* *How to set the beeper sound is enable, refer to Chapter 7-4, page 18.*

### b. Pause the datalogger

During execute the Datalogger function, if press the " LOG Button " ( 3-8, Fig. 1 ) once will pause the Datalogger function ( stop to save the measuring data into the memory circuit temporally ). In the same time the the " REC " symbol will stop flashing, the lower LCD will show the text of " Log ".

#### *Remark :*

*If press the " LOG Button " ( 3-8, Fig. 1 ) once again will execute the Datalogger again, the " REC " symbol will flashing.*

### c.. Finish the Datalogger

During execute the Datalogger function, press the " LOG Button ( 3-8, Fig. 1 ) > 3 seconds continuously again will finish the Datalooger function, the " Log " text will be disappeared and finish the Datalogger.

### **5-3 Manual Datalogger ( Set sampling time = 0 second )**

a. Set sampling time is to 0 second

Press the " LOG Button ( 3-8, Fig. 1 ) > 3 second , the lower LCD will show the " Position no. " , then press the " LOG Button " ( 3-8, Fig. 1 ) once, the " REC " symbol will flashing once and Beeper will sound once, at the same time the measuring data along the time information will be saved into the memory circuit.

*Remark :*

*During execute the Manual Datalogger, it can use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to set the measuring position ( 1 to 99, for example room 1 to room 99 ) to identify the measurement location , the lower Display will show P x ( x = 1 to 99 ).  
( x = 1 to 99 ).*

b. Finish the Datalogger

During execute the Datalogger function, press the " LOG Button ( 3-8, Fig. 1 ) > 3 seconds continuously again will finish the Datalogger function, the Position no. " PXX " will be disappeared and finish the Datalogger. function.

### **5-4 Check time information**

During the normal measurement ( not execute the Datalogger ), If press " Clock Button " ( 3-7, Fig. 1 ) once , the lower LCD display will present the time information of Year/Month, Date/Hour, Minute/Second and the Sampling time information in sequence.

## 5-5 SD Card Data structure

- 1) When the first time, the SD card is used into the meter, the SD card will generate a folder :

### **LXC01**

- 2) If the first time to execute the Datalogger, under the route LXC01\, will generate a new file name LXC01001.XLS.  
After exist the Datalogger, then execute again, the data will save to the LXC01001.XLS until Data column reach to 30,000 columns, then will generate a new file, for example LXC01002.XLS
- 3) Under the folder LXC01\, if the total files more than 99 files, will generate anew route, such as LXC02\ .....
- 4) The file's route structure :

```
LXC01\   LXC01001.XLS
          LXC01002.XLS
          .....
          LXC01099.XLS
LXC02\   LXC02001.XLS
          LXC02002.XLS
          .....
          LXC02099.XLS
LXCXX\   .....
```

*Remark :*

*XX : Max. value is 10.*




## 6. Saving data from the SD card to the computer ( EXCEL software )

- 1) After execute the Data Logger function, take away the SD card out from the " SD card socket " ( 3-11, Fig. 1 ).
- 2) Plug in the SD card into the Computer's SD card slot ( if your computer build in this installation ) or insert the SD card into the " SD card socket ". then connect the " SD card socket " into the computer.
- 3) Power ON the computer and run the " EXCEL software ".  
Down load the saving data file ( for example the file name : LXC01001.XLS, LXC01002.XLS ) from the SD card to the computer. The saving data will present into the EXCEL software screen ( for example as following EXCEL data screens ) , then user can use those EXCEL data to make the further Data or Graphic analysis usefully.

EXCEL data screen ( for example )

Place	Date	Time	Value	Unit
3	2000/1/9	18:53:29	537	LUX
4	2000/1/9	18:53:30	536	LUX
5	2000/1/9	18:53:32	536	LUX
6	2000/1/9	18:53:34	536	LUX
7	2000/1/9	18:53:36	633	LUX
8	2000/1/9	18:53:38	661	LUX
9	2000/1/9	18:53:40	688	LUX
10	2000/1/9	18:53:42	680	LUX
11	2000/1/9	18:53:44	653	LUX
12	2000/1/9	18:53:46	635	LUX
13	2000/1/9	18:53:48	679	LUX
14	2000/1/9	18:53:50	685	LUX
15	2000/1/9	18:53:52	678	LUX
16	2000/1/9	18:53:54	676	LUX
17	2000/1/9	18:53:56	675	LUX
18	2000/1/9	18:53:58	636	LUX
19	2000/1/9	18:54:00	336	LUX
20	2000/1/9	18:54:02	539	LUX
21	2000/1/9	18:54:04	523	LUX

EXCEL graphic screen ( for example )

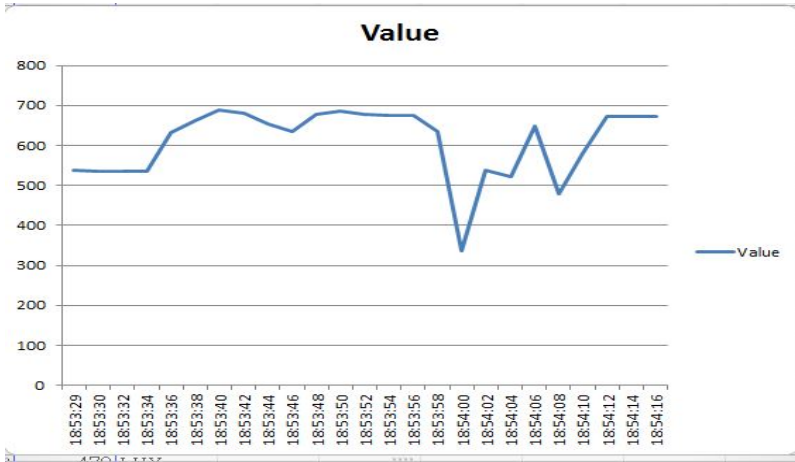

## 7. ADVANCED SETTING

Under do not execute the Datalogger function, press the " SET Button " ( 3-7, Fig. 1 ) continuously at least two seconds will enter the " Advanced Setting " mode. then press the " SET Button " ( 3-7, Fig. 1 ) once a while in sequence to select the eight main function, the lower display will show :

- dAtE.....** Set clock time ( Year/Month/Date, Hour/Minute/Second )
- SP-t.....** Set sampling time ( Hour/Minute/Second )
- PoFF.....** Auto power OFF management
- bBEEP.....** Set beeper sound ON/OFF
- dEC.....** Set SD card Decimal character
- Sd F.....** SD memory card Format
- t-CF.....** Select the Temp. unit to °C or °F
- tYPE.....** Select the Thermometer to Type K or Type J

*Remark :*

*During execute the " Advanced Setting " function, if press " SET Button " ( 3-7, Fig. 1 ) > 3 seconds will exit the " Advanced Setting " function, the LCD will return to normal screen.*

### **7-1 Set clock time ( Year/Month/Date, Hour/Minute/ Second )**

When the lower display show " dAtE "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to adjust the value ( Setting start from Year value ). After the desired value is set, press the " Enter Button " ( 3-8, Fig. 1 ) once will going to next value adjustment ( for example, first setting value is Year then next to adjust Month, Date, Hour, Minute, Second value ).
- 2) After set all the time value ( Year, Month, Date, Hour, Minute, Second ), press the " ENETER Button " ( 3-8, Fig. 1 ) once will save the time value.

*Remark :*

*After the time value is setting, the internal clock will run precisely even Power off if the battery is under normal condition ( No low battery power ).*

## **7-2 Set sampling time ( Seconds )**

When the lower display show " SP-t "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to adjust the value ( 0, 1, 2, 5, 10, 30,60, 120, 300, 600, 1800,3600 seconds ).
- 2) After the Sampling value is selected, press the " Enter Button " ( 3-8, Fig. 1 ) will save the setting function with default.

## **7-3 Auto power OFF management**

When the lower display show " PoFF "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to select the upper value to " yES " or " no ".

**yES - Auto Power Off management will enable.**

**no - Auto Power Off management will disable.**

- 2) After select the upper text to " yES " or " no ", press the " ENTER Button " ( 3-8, Fig. 1 ) will save the setting function with default.

## **7-4 Set beeper sound ON/OFF**

When the lower display show " bEEP "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to select the upper value to " yES " or " no ".

**yES - Meter's beep sound will be ON with default.**  
**no - Meter's beep sound will be OFF with default.**  
**is power ON.**

- 2) After select the upper text to " yES " or " no ", press the " ENTER Button " ( 3-8, Fig. 1 ) will save the setting function with default.

### **7-5 Decimal point of SD card setting**

The numerical data structure of SD card is default used the " ." as the decimal, for example "20.6" "1000.53" . But in certain countries ( Europe ... ) is used the " ," as the decimal point, for example " 20,6 " "1000,53" . Under such situation, it should change the Decimal character at first.

When the lower display show " dEC "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to select the upper text to " USA " or " Euro " .

**USA - Use " ." as the Decimal point with default.**  
**Euro - Use " ," as the Decimal point with default.**

- 2) After select the upper text to " USA " or " Euro " , press the " ENTER Button " ( 3-8, Fig. 1 ) will save the setting function with default.

### **7-6 SD memory card Format**

When the lower display show " Sd F "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to select the upper value to " yES " or " no " .

**yES - Intend to format the SD memory card**  
**no - Not execute the SD memory card format**

- 2) If select the upper to " yES ", press the " Enter Button " ( 3-8, Fig. 1 ) once again, the Display will show text " YES Ent " to confirm again, if make sure to do the SD memory card format, then press " Enter Button " once will format the SD memory clear all the existing data that already saving into the SD card.

### ***7-7 Select the Temp. unit to C or F***

When the lower display show " t-CF "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to select the upper Display text to " C " or " F ".

**C - Temperature unit is °C**

**F - Temperature unit is °F**

- 2) After Display unit is selected to " C " or " F ", press the " Enter Button " ( 3-8, Fig. 1 ) will save the setting function with default.

### ***7-8 Select the Thermometer to Type K or Type J***

When the lower display show " tYPE "

- 1) Use the " ▲ Button " ( 3-5, Fig. 1 ) or " ▼ Button " ( 3-6, Fig. 1 ) to select the Display unit to " K " or " J "

**K - Type K thermometer**


**j - Type J thermometer**

- 2) After Display unit is selected to " K " or " J ", press the " Enter Button " ( 3-8, Fig. 1 ) will save the setting function with default.

## 8. POWER SUPPLY from DC ADAPTER

The meter also can supply the power supply from the DC 9V Power Adapter ( optional ). Insert the plug of Power Adapter into " DC 9V Power Adapter Input Socket " ( 3-14, Fig. 1 ). The meter will permanent power ON when use the DC ADAPTER power supply ( The power Button function is disable ).

## 9. BATTERY REPLACEMENT

- 1) When the left corner of LCD display show "  ", it is necessary to replace the battery. However, in-spec. measurement may still be made for several hours after low battery indicator appears before the instrument become inaccurate.
- 2) Loose the screws of the " Battery Cover Screws " ( 3-16, Fig. 1 ) and take away the " Battery Cover " ( 3-15, Fig. 1 ) from the instrument and remove the battery.
- 3) Replace with DC 1.5 V battery ( UM3, AA, Alkaline/heavy duty ) x 6 PCs, and reinstate the cover.
- 4) Make sure the battery cover is secured after changing the battery.

## 10. SYSTEM RESET

If the meter happen the troubles such as :

*CPU system is hold ( for example, the key button can not be operated... ).*

Then make the system RESET will fix the problem.  
The system RESET procedures will be either following method :


During the power on, use a pin to press the " Reset Button " ( 3-13, Fig. 1 ) once a while will reset the circuit system.

## 11. RS232 PC SERIAL INTERFACE

The instrument has RS232 PC serial interface via a 3.5 mm terminal ( 3-12, Fig. 1 ).

The data output is a 16 digit stream which can be utilized for user's specific application.

A RS232 lead with the following connection will be required to link the instrument with the PC serial port.

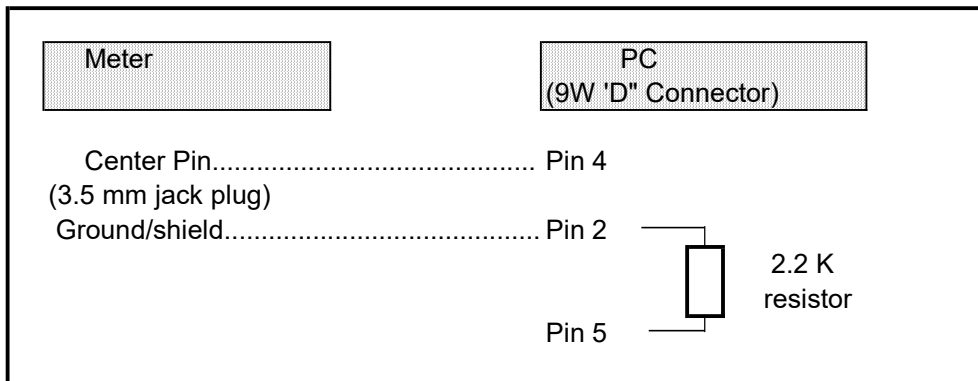



The 16 digits data stream will be displayed in the following format :

D15 D14 D13 D12 D11 D10 D9 D8 D7 D6 D5 D4 D3 D2 D1 D0
---

**Each digit indicates the following status :**

D0	End Word
D1 & D8	Display reading, D1 = LSD, D8 = MSD For example : If the display reading is 1234, then D8 to D1 is : 00001234
D9	Decimal Point(DP), position from right to the left 0 = No DP, 1= 1 DP, 2 = 2 DP, 3 = 3 DP
D10	Polarity 0 = Positive      1 = Negative
D11 & D12	Annunciator for Display
	°C = 01      °F = 02
	LUX = 15      Ft-cd = 16
D13	When send the upper display data = 1 When send the lower display data = 2
D14	4
D15	Start Word

**RS232 FORMAT : 9600, N, 8, 1**

Baud rate	9600
Parity	No parity
Data bit no.	8 Data bits
Stop bit	1 Stop bit

## 12. Optional Type K Temp. probe

(Type K) TP-01	<ul style="list-style-type: none"> <li>* Max. short-tern operating Temperature: 300 °C (572 °F).</li> <li>* It is an ultra fast response naked-bead thermocouple suitable for many general purpose application.</li> </ul>
Thermocouple Probe (Type K), TP-02A	<ul style="list-style-type: none"> <li>* Measure Range: -50 °C to 900 °C , -58 °F to 1650 °F.</li> <li>* Dimension: 12cm tube, 3.2mm Dia.</li> </ul>
Thermocouple Probe (Type K), TP-03	<ul style="list-style-type: none"> <li>* Measure Range: -50 °C to 1100 °C , -58 °F to 2012 °F.</li> <li>* Dimension: 13.6cm tube, 8mm Dia.</li> </ul>
Surface Probe (Type K), TP-04	<ul style="list-style-type: none"> <li>* Measure Range: -50 °C to 400 °C , -58 °F to 752 °F.</li> <li>* Size : Temp. sensing head - 15 mm Dia. Probe length - 120 mm.</li> </ul>

## 13. PATENT

The meter ( SD card structure ) already get patent or patent pending in following countries :

Germany	Nr. 20 2008 016 337.4
JAPAN	3151214
TAIWAN	M 456490
CHINA	ZL 2008 2 0189918.5
	ZL 2008 2 0189917.0