#### Dual laser + type K thermometer

# 1000 °C INFRARED THERMOMETER

Model: TM-969



Your purchase of this INFRARED THERMOMETER marks a step forward for you into the field of precision measurement.

Although this METER is a complex and delicate instrument, its durable structure developed. Please read the following instructions carefully and always keep this manual within easy reach.

## **OPERATION MANUAL**

## **TABLE OF CONTENTS**

1.	. FEATURES	. 1
2	. SPECIFICATIONS	2
3	FRONT PANEL DESCRIPTION	. 4
	3-1 Emissivity Button	. 4
	3-2 Down Button	. 4
	3-3 LCD Display	. 4
	3-4 Up Button	
	3-5 Mode Button	. 4
	3-6 Measure Switch	. 4
	3-7 Battery Cover	4
	3-8 Infrared Lens	. 4
	3-9 Laser	. 4
	3-10 LED	. 4
	3-11 Thermocouple Socket	. 4
4	. MEASURING PROCEDURE	. 5
5	MEASURING CONSIDERATION	. 7
6	BATTERY REPLACEMENT	. 8
7.	OPTIONAL TYPE K TEMP. PROBE	9

#### 1. FEATURES

- \* None contact infrared temperature measurement up to 1,000 °C measurement.
- \* Type K thermocouple thermometer, up to 1400  $^{\circ}\text{C}$  measurement.
- \* Dual laser for better targeting.
- \* Large LCD display with back light.
- \* D/S ratio value: 50/1.
- \* Min., Max., Differential, Average, Lock mode.
- \* Last measurement memory.
- \* Hi/Lo Temperature Audio Alarm.
- \* Laser target and Back light On/Off control.
- \* Adjustable emissivity value from 0.1 to 1.00.
- \* Preset emissivity value at 0.95.
- \* Power supply by two AAA batteries, long life.

#### 2. SPECIFICATIONS


2-1 General Specifications

Display	LCD, 31 mm x 43 mm.
Functions	* °C , °F .
	* Min., Max., Differential, Average.
	* Lock mode.
	* Auto power off.
	* LCD back light.
	* Emissivity adjustment.
Infrared Temp.	-60 to 1000 $^{\circ}\mathrm{C}$ ( -76 to 1832 $^{\circ}\mathrm{F}$ ).
Measurement	
Range	

Infrared Tamp	. 1 °C (10 °D)
Infrared Temp.	± 1 °C (1.8 °F)
Accuracy	* Object Temp. = 15 to 35 $^{\circ}$ C
	* Ambient Temp. = 25 °C
	$\pm$ 2 % of reading or $\pm$ 2 $^{\circ}$ C ( $\pm$ 4 $^{\circ}$ F ).
	whichever is greater.
	* Object Temp. = -33 to 1000 $^{\circ}$ C
	* Ambient Temp. = $23 \pm 3^{\circ}C$
Type K	-64 to 1400 $^{\circ}\mathrm{C}$ ( -83.2 to 2552 $^{\circ}\mathrm{F}$ ).
Thermometer	
Range	
Type K	$\pm$ 1 % of reading or $\pm$ 1 $^{\circ}$ C ( $\pm$ 1.8 $^{\circ}$ F ),
Thermometer	* Test under T ambient = 23 ± 5 °C
Accuracy	
Resolution	0.1 °C/0.1 °F. < 1,000 °C/< 1,000 °F
	1 °C/1 °F. ≥1,000 °C/≥ 1,000 °F
Circuit	Exclusive microcomputer circuit.
Emissivity	Adjustment range: 0.10 to 1.00,
Adjustment	step 0.01.
	* 0.95 default emissivity value.
Infrared Temp.	Thermocouple pie.
Temp. Sensor	
Measurement	8 to 14 micro meter.
Wave length	
Region	
Distance Factor	D/S: Approx. 50:1 (typical 25:1).
	D - Distance, S - Spot.
	•
	* Distance to spot using 90%
	encircled energy at focal point.
Target Guide	* Two laser target guide.
3	* Less than 1 mW.
	* Class 2 red laser diode. Wave length
	is 645 nm approximately.

Sampling Time	Approx. 0.7 second.	
Power Supply	DC 1.5V AAA ( UM-4 ) battery x 2 PCs,	
	heavy duty or Alkaline.	
Power	without target light on :	
Consumption	Approx. DC 1.5 mA.	
	with target light on :	
	Approx. DC 29.5 mA.	
Operating	0 to 50 °C (32 to 122 °F).	
Temperature		
Operating	Less than 80% RH.	
Humidity		
Weight	386 g/0.85 LB.	
Dimension	203 x 197 x 47 mm	
	(8.0 x 7.7 x 1.8 inch)	
Standard	Operational manual1 PC.	
Accessories	Hard carrying case1 PC.	
	DC 1.5V AAA ( UM-4 ) battery2 PC.	
Optional	TP-01, TP-02, TP-03, TP-04,	
Type K Temp.	refer page 9	
Probe		

#### 3. FRONT PANEL DESCRIPTION

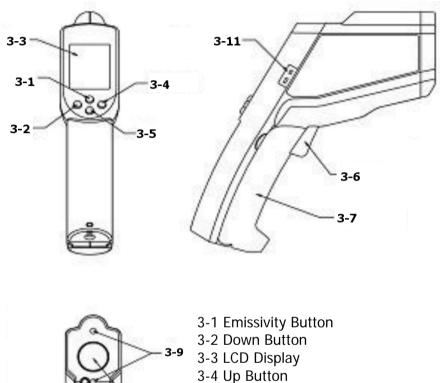

3-10

- 3-7 Battery Cover

3-5 Mode Button 3-6 Measure Switch

- 3-8 Infrared Lens
- 3-9 Laser
- 3-10 LED
- 3-11 Thermocouple Socket

Fig. 1

#### 4. MEASURING PROCEDURES

1) Default LCD Screen



- 2) Simply aim the thermometer at the measure target with "Infrared Lens (3-8, Fig. 1) and press "Measure Button" (3-6, Fig. 1) to display the surface temperature. The Distance: Spot is 50:1. The two laser points are the reference for the target spot size. Please make sure the target area is within the field of view.
- 3) Press " Emissivity Button " (3-1, Fig. 1) for setting the emissivity



Press " Emissivity Button " ( 3-1, Fig. 1 ), then press " Up Button " ( 3-4, Fig. 1 ) or Down key ( 3-2, Fig. 1 ) to set the emissivity, then press " Mode Button " ( 3-5, Fig. 1) to confirm it. The emissivity can be changed from 0.10 to 1 .

4) Press " Mode Button " (3-5, Fig. 1) for scrolling more display function as follows.

<b></b>	E	Here will show the emissivity data. (The default emissivity is 0.95.)
	MRX MIN JIF RVG	special modes reading will be displayed beside the mode icon.  Press " Up Button " ( 3-4, Fig. 1) or " Down
	HAL LAL	Button " (3-2, Fig. 1) key to change the High Alarm (HAL) or Lo Alarm (LAL), then press " Measure Button " (3-6, Fig. 1) to confirm it.  For example: When the reading 26.9 °C < LAL 27 °C, the Low icon will flash and you will hear a beep sound.
	PR]	Connect the thermocouple with " Thermocouple Socket " ( 3-11, Fig. 1 ) and put the probe in/on the target, the thermometer will display the temperature automatically without pressing any button. To see the minimum or maximum data during the probe measurement, please hold down the " Up Button " ( 3-4, Fig. 1 ) or " Down Button " ( 3-2, Fig. 1).  After measure high temp, the probe may remain HOT for a while

5) The thermometer will automatically shut off if left idle for more than 60 seconds.

#### 6) In MAX, MIN, DIF, AVG mode:

- a. Press " Up Button " ( 3-4, Fig. 1 ) for LOCK mode ON/OFF. The lock mode is particularly useful for continuous monitoring of temperatures for up to 60 minutes.
- b. Press " Down Button " ( 3-2, Fig. 1) for  $^{\circ}\mathbb{C}$  or  $^{\circ}\mathbb{F}$  transferred

# 7) In all modes: First hold on the "Measure Button" (3-6, Fig. 1)

- a. and press "Up Button" (3-4, Fig. 1) for backlight function ON/OFF.
- b. and press " Down Button " (3-2, Fig. 1) for laser function ON/OFF. (With flash light be turned on in the same time as laser )

#### 5. MEASURING CONSIDERATION

#### 5-1 LCD error message

The thermometer incorporates visual diagnostic messages as follows

	Hi' or 'Lo' is displayed when the
$((\iota_{1} \circ \iota_{1} \circ \iota_{1}))$	temperature being measured is outside of
V. LOVA 47	the settings of HAL and LAL.
	Er2' is displayed when the thermometer
E- 2	is exposed to rapid changes in the
L' L	ambient temperature. 'Er3' is displayed
Fc 3	when the ambient temperature exceeds
	$0  ^{\circ}\!\! \text{C}  (32 ^{\circ}\!\! \text{F}) \text{ or } +50  ^{\circ}\!\! \text{C}  (122 ^{\circ}\!\! \text{F}).$
	The thermometer should be allowed
	plenty of time (minimum 30 minutes) to
	stabilize to the working/room
	temperature.

Er	Error 5~9, for all other error messages it is necessary to reset the thermometer. To reset it, wait for auto power off, remove the battery and wait for a minimum of one minute, reinsert the battery and turn on. If the error message remains please contact the Service Department for further assistance.
H, Lo	" Hi " or " Lo " is displayed when the temperature being measured is outside of the measurement range.

#### 6. BATTERY REPLACEMENT

When the 'Low Battery' icon indicates the battery is low, the battery should be replaced immediately with AAA, 1.5V batteries. Please note: It is important to turn the instrument off before replacing the battery otherwise the thermometer may malfunction.

	Battery OK:
	Measurements are possible.
E-7	Battery Low:
	Battery needs to be replaced,
	measurements are still possible.
\ <u>      </u> _	Battery Exhausted :
7117	Measurements are not possible

### 7. OPTIONAL TYPE K TEMP. PROBE

(Type K) TP-01	<ul> <li>* Max. short-tern operating     Temperature: 300 °C (572 °F).</li> <li>* It is an ultra fast response     naked-bead thermocouple     suitable for many general purpose     application.</li> </ul>
Thermocouple	$^*$ Measure Range: -50 $^\circ$ C to 900 $^\circ$ C,
Probe	-50 °F to 1650 °F.
(Type K), TP-02A	* Dimension:10cm tube, 3.2mm Dia.
Thermocouple	$ *$ Measure Range: -50 $^{\circ}$ C to 1200 $^{\circ}$ C,
Probe	-50 °F to 2200 °F.
(Type K), TP-03	* Dimension: 10cm tube, 8mm Dia.
Surface Probe	$^*$ Measure Range: -50 $^\circ$ C to 400 $^\circ$ C,
(Type K), TP-04	-50 °F to 752 °F.
	* Size :
	Temp. sensing head - 15 mm Dia.
	Probe length - 120 mm.